



INSTRUCTION BOOKLET

DIAMOND WAVES


ON TREND WAVES

VSC230A

ABOUT YOUR STYLER

CONGRATULATIONS!

The specially designed spiral barrel with luxuriously smooth diamond like ceramic finish gives ultimate smoothness to effortlessly create flawless waves with brilliant, healthy shine. Ideal for most hair types.

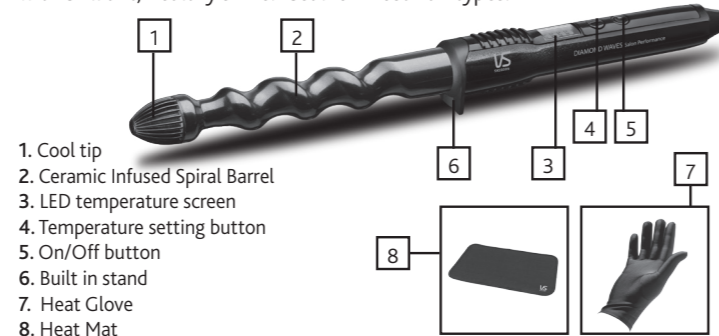

SPIRAL BARREL	Designed to guide your hair along the barrel. The spiral shape not only makes styling easy but it also allows you to use larger sections - perfect for creating big waves.
DIAMOND RADIANCE TECHNOLOGY	Just feel how smooth the barrel finish is. It is 50% smoother & 20% harder than standard ceramic.
150°C TO 210°C LED DIGITAL HEAT SETTINGS	Personalise & adjust the temperature settings to suit your hair & style requirements.
HEAT PROTECTIVE GLOVE	We have included a full size heat resistant glove for extra protection and to make the styling process more comfortable.
CERAMIC HEATER	A truly professional ceramic heater ensures fast and constant heat with superior heat recovery. Just what you need when you want fast and professional results.
BUILT IN STAND	A stand has been built into this styler to prevent it from rolling over, protect surface and make styling easier.
HEAT PROTECTIVE MAT	We have included a heat resistant mat to place the styler on whilst styling your hair; and for extra protection when storing away, wrap the styler in the heat protection mat.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use.
(used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Plug your styler into a 240V power outlet.
- Place your styler on a heat protective, flat level surface using the stand.
- Press the button marked 'I/O' to turn the appliance on.
- The green indicator light will turn on and start to flash. At this point your styler will start to heat up at 150°C temp setting.
- Press the +/- buttons to adjust the temperature you desire. Once the LED light stops flashing (green for lowest temp, orange for medium and red for highest), the styler has heated to the selected temperature.
- Your styler is ready to use.
- Allow styler to cool before storing. For extra protection, wrap the styler in the heat protection mat.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck. The integrated support stand is intended to support the appliance on a flat surface when the product is switched off only. The appliance must not be switched on or operated while placed on a surface sensitive to heat (such as wood or fabric etc).

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

CAUTION! A universal heat protective glove has been supplied to help protect the hand from temporary contact with the barrel when wrapping the hair around the styler.

STYLE INSTRUCTIONS

- Ensure hair is dry and combed through.
- Press the button marked 'I/O' to turn the appliance on.
- Press the '+/-' button to select the desired temperature.
- The appliance will heat up in seconds, the LED light will flash until the temperature setting has been reached. Allow slightly longer if using on the higher temperature settings.
- Section the hair evenly and comb through. Before styling make sure the heat glove is worn on the hand which is wrapping the hair around the barrel.
- Take a section of hair starting around 2 inches from the scalp.
- Wind the hair section around the barrel until you reach the ends of the hair. Whilst wrapping the hair around the barrel, let the hair section fall naturally around the twisted design to achieve natural, show stopping waves.
- Hold the ends of the hair for 5-8 seconds, depending on hair type. For longer hair, hold the ends of the hair on the cool tip. Unwind the hair from around the barrel or simply release the hair section and pull styler away.
N.B: Some experimenting is necessary when using a curler for the first time or when changing to a different hair style.
- For best results, do not comb or brush the hair until it has cooled down. This allows time for the wave to 'set' and give lasting results. Once the hair has cooled style hair as normal.
- Repeat as necessary.
- After use, press the 'I/O' button to turn appliance off and unplug from the mains.
- Allow to cool before storing away.

STYLE TIPS

- // For the best results, start with clean, dry & thoroughly combed through hair.
- // For looser waves, after styling the hair and it has cooled down, run fingers through the hair to break up the waves.
- // Position the wand further down the hair section and start wrapping the hair around the barrel at about eye level.
- // For extra hold and lasting effect, spray hair with hairspray after styling.
- // Experiment with various heat settings. Top temperatures may be too hot for fine, delicate or colour-treated hair, so bring the heat down to one of the lower settings if this applies to your hair.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair.

©2015 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com
vssassoon.com.au
VSC230A

VARIABLE HEAT SETTINGS

This styler provides variable temperature settings, please make sure choose the required temperature setting according to your particular need and hair type.

Temperature	Settings	Hair Type	Wave Type
Low	150°C/165°C	Fine	Loose
Medium	180°C/195°C	Normal - Thick	Medium
High	210°C	Thick & wavy/curly hair	Tight (but can be brushed out to create big and bold waves)

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the styler for the first time.

USER MAINTENANCE

Your styler is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the appliance to cool and wipe exterior with a cloth. If any abnormal conditions occur, allow to cool and contact Conair Customer Service. No lubrication is needed. Keep all vents and openings clear of lint and other debris.

DIAMOND RADIANCE TECHNOLOGY

This styler has been created with Diamond Radiance Technology. This means its spiral barrel is coated with a ceramic which is 50% smoother and 20% harder than a standard ceramic*, providing diamond like luxuriously smooth perfection and brilliant results.

Diamond Radiance technology has properties that help to reduce your hairs' static electricity by generating negatively charged ions, closing the hair cuticle & minimizing static electricity. It will help ensure your hair is free from frizzies and ensure a smooth result every-time.

CARE OF YOUR STYLE

To help keep your styler in the best possible condition follow the steps below:

- Do not wrap the lead around the styler, instead coil the lead loosely by the side of the styler.
- Do not use the styler at a stretch from the power point.
- Always unplug after use.

AUTO-OFF SYSTEM

This styler has an automatic safety cut off system which will automatically turn your styler off if left on accidentally for 72 minutes. If this occurs, please wait for your styler to cool. Switch off and unplug the power cord. Plug the power cord back in and switch the styler on to start using your styler again.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

The basic safety instructions should always be followed, including the following: Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER

- **WARNING:** Do not use this styler in or near bathtubs, showers, basins or other vessels containing water. Keep the styler dry.
- When this styler is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the styler is switched off.
- If this styler falls into water, unplug it immediately- DO NOT reach into the water.
- Do not immerse in water or other liquids.

WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the styler is the same as your local power voltage.
- If the styler is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the styler must only be used with the power supply it was sold with.
- Do not operate this styler or disconnect from the power supply with wet hands.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered
- Be very careful when handling this styler as parts of it may get extremely hot.
- Do not place the styler on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the styler or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this styler with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this styler.
- Unit is hot when in use. Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.



WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.