

VS
SASSOON

INSTRUCTION
BOOKLET


Miss VS
total crimp

VS2165A

ABOUT YOUR TOTAL CRIMP

CONGRATULATIONS!

Add volume & soft texture or create a dynamic crimped look. VS Sassoon's Total Crimp is a powerful crimper that features ceramic tourmaline plates. It has 10 variable temperature settings up to 210°C & heats up quickly for fast results.

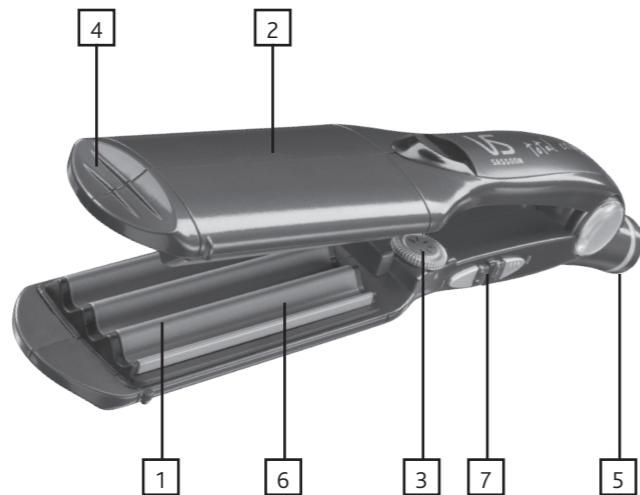

1. Ceramic tourmaline plates
2. Up to 210°C
3. 10 variable heat settings
4. Cool touch ends
5. Power cord
6. Crimped, wide plates
7. On and off button with indicator lights

CERAMIC TOURMALINE
TECHNOLOGY

Provides even heat distribution. Assists in the deep penetration of heat and is a natural source of negative ions for reduced frizz and a silky, smooth finish with enhanced shine.

UP TO 210°C

Fast heat up. Up to 210°C high heat for salon professional results.

10 VARIABLE HEAT
SETTINGS

To suit most individual hair types.

WIDE PLATES

So you can style bigger sections at a time, so you can look fabulous fast.

AUTOMATIC SAFETY
CUT OFF SYSTEM

For peace of mind styling.

CRIMPED PLATES

For volume & soft texture or create a dynamic crimped look.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Remove all packaging and sale labels before use.
- Wash and condition your hair as usual. Ensure that hair is dry, combed through and tangle-free.
- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Plug the appliance into a suitable power outlet, the "on" indicator will illuminate red.
- Press the "I" button and both the red and green lights will flash.
- Select the desired temperature using the temperature dial. Please see 'The Variable Temperature Settings' for more information.
- When the appliance has reached its optimum temperature the indicator lights will stop flashing and will remain green. Your Total Crimp is now ready to use.
- Separate your hair into 5cm sections
- Place the section of hair between the crimping plates
- Hold the hair firmly between the plates for approx. 5 seconds.
- Release that section of hair and re-position the crimper so that the next crimp falls in line with the first.
- Always work from the root to the tip of your hair
- Repeat as necessary
- After use press the "O" button to turn the appliance off. Allow to cool before storing away.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

Good
hair
MAKES
you RULE
the world

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2016 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VS2165A

THE VARIABLE TEMPERATURE SETTINGS

The 10 variable temperature settings provide variable heat for many different air types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

WARNING: This appliance is suitable for average use on the medium high heat setting of 3-5. The 5-8 and 8-10 maximum high heat settings are not suitable for hair that has been chemically treated, bleached or damaged.

DO NOT USE THIS PRODUCT ON HEAT DAMAGED OR CHEMICALLY TREATED HAIR ON THE HIGHER HEAT SETTINGS.

TEMPERATURE SETTING GUIDE	
VARIABLE TEMPERATURE CONTROL SETTINGS	HAIR TYPE
1-3 (Low)	Delicate, thin, easy-to-style
3-5	Average to thick, treated hair
5-8	Thick or wavy hair
8-10 (High)	Hard-to-style hair

WHAT IS CERAMIC TOURMALINE TECHNOLOGY?


Ceramic tourmaline technology delivers even heat without hot spots. Tourmaline is a semiprecious crystal which is a natural source of negative ions and far-infrared (FIR) rays. The production of negative ions from tourmaline eliminates static in the hair, and far-infrared rays assist in the deep penetration of heat thus preventing hair damage. When in contact with wet hair, Ceramic tourmaline technology works to ionise and alkalise moisture, and provides antibacterial and deodorant qualities.

NB: This appliance has an automatic safety cut off system which will automatically turn the appliance off if left on accidentally for over 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off and unplug the power cord. Plug the power cord in and switch the appliance on.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNINGS:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry. 
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.

- **WARNINGS:** Before and During Use
- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- Do not immerse the appliance into water or other liquids

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask you installer for advice