

**VS**  
SASSOON

INSTRUCTION  
BOOKLET

**3Q** DIGITAL  
SMART  
TECHNOLOGY  
HIGH PERFORMANCE COMPACT DRYER

VSP3QCTA

**BRINGING A NEW ERA IN TECHNOLOGY FOR THE ULTIMATE IN PROFESSIONAL STYLING.**

**FEATURING NEW BRUSHLESS DIGITAL MOTOR TECHNOLOGY TO DRY SMARTER.**

**ABOUT BRUSHLESS DIGITAL MOTOR TECHNOLOGY:**

- Most dryer motors use carbon brushes that wear out over time causing the motor to stop working. This next generation 'Smart Digital' brushless motor uses magnets and electronics to drive the motor, extending the life of the dryer by up to 3000 hours\*.
- Ultra-fast airflow delivers superior drying power to reduce drying time.
- Lighter and quiet operation with patented noise reduction technology.



1. Removable rear filter
2. Heat & speed settings
3. True cold setting
4. Concentrator
5. Hanging loop

**LONG-LASTING BRUSHLESS DIGITAL MOTOR** Use of magnets and electronics provide up to 3000hrs motor life vs 500 hours for a standard AC motor hair dryer backed by a 3 year warranty.

**ENHANCED HAIR PROTECTION** Advanced brushless digital motor ensure a more consistent, controlled and powerful airflow. This dries hair dramatically faster whilst reducing extreme heat damage.

**ULTRA-FAST** Up to 70% more air pressure\*\* for faster drying and less heat damage to enhance the health and natural shine of your hair. Ideal for thicker hair.

**FRIZZ FREE RESULTS** High Ionic- ceramic conditioning actively eliminates static and tames frizz. Active ions surround the hair to give a shine boost as you dry.

**6 CONTROL SETTINGS** 3 heat & 2 speed settings, plus a true cold to finish & set your style

**QUIETONE NOISE REDUCED** Air intake designed for lower noise, patent pending.

**TOTAL STYLING CONTROL** Ultra slim concentrator to direct airflow along the length of your hair & help you to style with greater precision.

## STYLE TIPS

### STRAIGHT

// Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

### VOLUME

// Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

### CURLS

// Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

### EXPERT TIP

// Set your style by finishing with the cold shot or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

- Wash, condition and towel dry your hair
- Make sure the switch is set to the off ('0') setting before plugging into a 230/240V power outlet.
- Use the high heat and high speed setting for initial drying or drying thick, hard to dry hair.
- Switch to the low speed setting as the hair begins to dry and for styling and scrunch drying.
- If your hair is very fine and or damaged, it may be best to use the low heat/speed setting.
- To finish, use the cold shot button to rapidly cool the hair and set the style in place.

**CAUTION:** Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held too close, cause discomfort or even burns.

**IMPORTANT:** Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**

## THE ATTACHMENTS

### Concentrator

Concentrator nozzles are designed to direct the airflow from your hair dryer to just where you want it, to ease styling and straightening. Nozzles also help you to direct the airflow along the length of the hair from roots to ends. This is important because it helps to smooth the outer surface or cuticle of the hair giving your hair style a smoother finish. For additional control try using one of the lower speed setting with a higher heat.

Care should be taken not to direct the air flow directly onto the skin (e.g. the scalp, neck, ears and face). Never rest the concentrator nozzle on the hair and brush to hold it in place! You should always leave a 2cm to 3cm gap between the end of the nozzle and the hair around the brush.

## HIGH IONIC CONDITIONING

Many aspects of modern living, including air conditioning, contact with man-made fibers and air pollution add to the build-up of static electricity in your hair. Even simply brushing and towel-drying your hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, your hair may have a dull appearance.

High levels of static charge cause your hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, leaving your hair silky and shiny with reduced frizz.

## CERAMIC TECHNOLOGY

Ceramic Technology will help keep your hair healthy and shiny looking. It generates full spectrum, infrared heat which works on hair molecules to dry them inside & out. It minimises heat damage and makes hair less frizzy and more manageable.

## CORD STORAGE

Keep the cord away from heated surfaces. After use NEVER wrap the cord tightly around the dryer as this creates stress on the internal cord wires at the high flex point of entry, causing it to rupture and short circuit. Coil cord loosely by the side of the appliance in storage.

## STORAGE

Unplug the appliance when not in use or before cleaning. Ensure that the appliance is switched off and has cooled down before storing.

## USER MAINTENANCE

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked and cleaned on a regular basis. To help maintain optimum performance and prevent overheating of your hairdryer:


- Ensure that your styler is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of your styler firmly, twist and pull the rear filter down to remove.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by pushing and twisting back into position.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord and allow the dryer to cool for 15 minutes before restarting. Make sure the air vents are 100% clean.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry. 
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.
- **WARNING:** Before and During Use
- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

**WARNINGS:** for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

### CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

**CONAIR**

Vidal Sassoon and related logos are trademarks of the Procter & Gamble Company used under license by Conair

©2017 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
**[vssassoon.com.au](http://vssassoon.com.au)**  
VSP3QCTA

\*When compared to standard AC motor hair dryer models.  
\*\* than standard DC motor dryers