



# INSTRUCTION BOOKLET



*Goddess™ Ultimate*


PROTECT AND SHINE  
STEAM STRAIGHTENER

VSP9500A

## ABOUT YOUR STYLER

### CONGRATULATIONS!

The VS Sassoon Goddess™ Ultimate Straightener is a professional straightener with steam that adds moisture and shine to hair with ultra straight results. It provides more shine, faster straightening and longer lasting results. It features an ultra fast heat-up and heat recovery and reaches a maximum heat of 230°C for seriously straight results. It creates unbelievable results on even the hardest to handle hair types all while ensure protection of the hair.

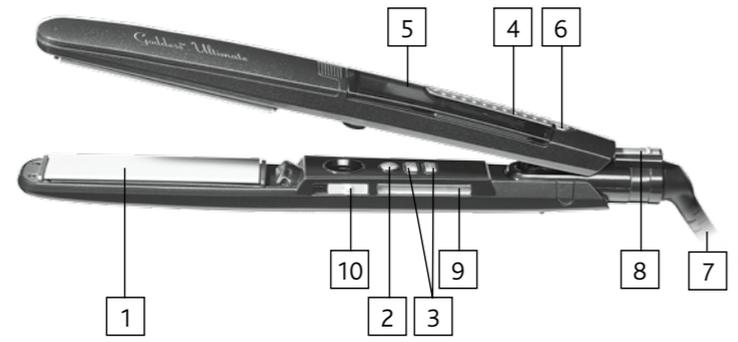

- 1. Tourmaline ceramic coated plates
- 2. I/O Button
- 3. Temperature adjust buttons (+ & -)
- 4. Decoration plate with dimples
- 5. Water reservoir
- 6. Press to release the water reservoir
- 7. Professional Power Cord
- 8. Locking switch
- 9. LED temperature display
- 10. Steam adjust button HIGH/LOW/OFF

LED VARIABLE TEMPERATURE, UP TO 230°C	Multiple heat settings to suit your hair type. For Fragile, fine, bleached hair 170°C-190°C, For Normal or coloured hair 190°C -210°C, For Thick, wavy, very curly hair 210°C-230°C.
IONIC CONDITIONING	This feature ensures smooth and silky, frizz free results with every pass.
WATER RESERVOIR	Holds the water you need to create the steam. Ensure this is emptied after every use. You can use standard distilled water.
STEAM FUNCTION	This can be turned on or off. Steam function will give you poker straight results while ensuring protection of the hair. You can select High or Low steam setting depending on your hair type. For thin hair select LOW and for thick, coarse or really curly hair select HIGH.
PLATE LOCK FUNCTION	You can lock your styler to ensure protection of the plates when transporting or storing.
PROFESSIONAL SWIVEL	For easy styling.
AUTOMATIC CUT-OFF	Your styler will automatically turn off after 72 mins meaning you never have to worry.
MULTI VOLTAGE	You can take your straightener anywhere in the world with you.
HEAT MAT	To place your styler on to ensure protection of all surfaces.

## FIRST USE

- Remove all packaging and point of sale labels before use
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

1. Remove all packaging and point of sale labels before use.
2. A plastic cover has been placed over the plug to protect it from damage during transportation. Remove the plastic cover from the plug before use.
3. Ensure hair is clean and completely dry before using the appliance.
4. Comb through hair to prevent knots and tangles and then divide hair into equal sections.
5. Remove the water reservoir located at the top of the unit and lift the black rubber button. Fill it with distilled water, and replace black button. Then put the reservoir back on the straightener.
6. Check that the reservoir is properly positioned and closed.
7. Check that the outside of the reservoir and your hands are dried well.
8. If the reservoir is full, you can use the steam function. If you have to fill the reservoir a second time, unplug the unit and replace the reservoir immediately after filling it, making sure you don't touch the hot plates.
9. Let the unit heat up for at least 2 minutes before using the steam function.
10. Avoid any contact between the hot surfaces and your face or neck. Make sure you do not direct the steam at your face or neck.
11. Plug the appliance into a 100-120V~ 220-240V~ power outlet.
12. Place the appliance on a heat protective, flat level surface.
13. Press the I/O button to switch the appliance on. The LED display: will instantly illuminate. At this point the straightener will instantly start heating up. The green light indicates that the straightener is on the lowest heat setting - 170 °C. Select your required temperature setting – please see 'Variable temperature settings' for more information. The blue light indicates that the internal ionic generator is switched on. As you move through the heat settings, the blue light will always stay illuminated, until the straightener is switched off.

## GODDESS™ ULTIMATE STRAIGHTENER WITH STEAM

On first use with the steam, or if the unit has not been used for a while, start up the steam function by closing and opening the unit 7 times (a pumping action)

1. Switch on the steam function.
2. Select the desired steam output, LOW or HIGH.
3. Straighten your hair from root to tip.

## GODDESS™ ULTIMATE STRAIGHTENER WITHOUT STEAM

1. Slide the steam function switch into the 'no steam' position or use the straightener with an empty reservoir.
  2. Next follow points 11. to 13. under Operating Instructions.
- Additionally, you can perfect and set your hair using one stroke with steam and then a second stroke without steam.
- NB:** This styler has a safety automatic shut-off system, which will automatically turn the styler off if left switched on accidentally for 72 minutes at 50Hz or 60mins at 60Hz. If this occurs, please wait for styler to cool. Switch the styler off and unplug the power cord.

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of the Procter & Gamble Company used under license by Conair

©2016 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)

[vssassoon.com.au](http://vssassoon.com.au)

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

VSP9500A

IB-15/553

## STYLE TIPS

### STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

### VOLUME

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straighteners down the hair length.

### SHORTER STYLES

// Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.

## MULTI-VOLTAGE

This straightener has a multi-voltage feature for worldwide use. The voltage automatically converts for ease of use from 100-120V~ 220-240V~.

**NOTE:** This straightener has an internal automatic converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	125V

## IONIC FEATURE

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

## BUZZING NOISE

This product will make a faint buzzing noise, due to the Ionic steaming function. It will also make a slight rattling noise, due to the feeder in the water reservoir. These noises are completely normal, and part of standard operation of this product.

## VARIABLE TEMPERATURE SETTINGS

The 4 variable temperature settings/digital heat control provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

**NB:** The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

**WARNING:** This straightener gets extremely hot. It is recommended to always start with the lowest temperature setting and adjust it accordingly after the first use, depending on the results and your hair type.

TEMPERATURES	HAIR TYPES	STEAM OUTPUT
170°C - 190°C LED	Fragile, fine, bleached hair	LOW
190°C - 210°C LED	Normal or coloured hair	LOW or HIGH
210°C - 230°C LED	Thick, wavy, very curly hair	HIGH

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Basic safety instructions should always be followed, including the following: polythene bags over product. Package maybe dangerous. To avoid danger of suffocation, keep this wrapped away from babies and children, This bag is not a toy. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.



### WARNINGS: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

## CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

### WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.