



INSTRUCTION BOOKLET

KERATIN PROTECT


SALON PERFORMANCE
CERAMIC WITH KERATIN

VSLE2540A

ABOUT YOUR DIGITAL STRAIGHTENER

CONGRATULATIONS!

Look after the beauty and natural shine of your hair, by ensuring you are using the best. VS SASSOON's KERATIN PROTECT STRAIGHTENER uses the most sophisticated technologies so that your hair is soft, shiny and totally protected. Get fast, long lasting result and minimize damage by using this most advanced straightener with Keratin infused ceramic technology and ultra fast heat.

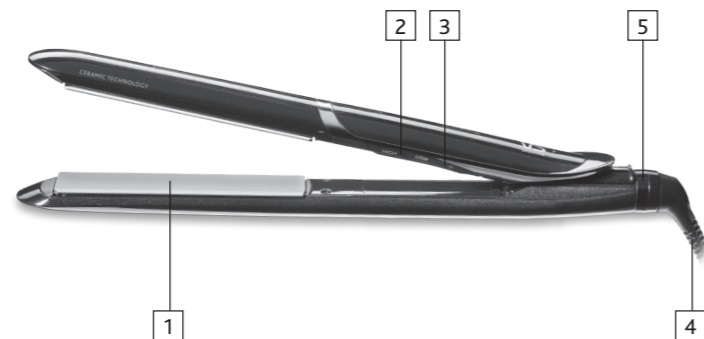

1. Keratin infused ceramic plates
2. Temperature Settings
3. On/off button
4. 1.8m power cord
5. Safety straightener lock

KERATIN INFUSED CERAMIC PLATES

For hair protection and beautiful smooth results

ULTRA-FAST STYLING

With advanced ceramic heating up to 235°C giving superior fast-action heat transfer and constant even heat.

6 DIGITAL HEAT SETTINGS 140°C - 235°C

Personalise & adjust the temperature settings to suit your hair & style requirements

LONGER PLATES

Ideal for styling larger sections reducing the overall time it takes to style your hair.



CURVED BODY DESIGN

The curved design allows you to create beautiful curls and waves quickly and effortlessly, with a salon high-shine finish.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Comb through dry hair and divide into sections.
- To turn on the appliance, press the  button.
- The appliance will automatically set to 200°C and will blink until the temperature has been reached. Once the temperature has been reached, the indicator will remain solid in colour.
- To select a temperature setting suitable for your hair type, press the 'HIGH' or 'LOW' button.
- Separate a section of hair and place between the plates, close to the roots.
- Close the plates together and hold the hair firmly between the plates.
- Slide down the length of hair, from root to tip.
- Repeat as necessary through the remaining sections.
- Allow the hair to cool before combing through.
- After use, press the button marked  to switch off the appliance and then unplug from the power point.
- For additional heat protection after use, close the appliance and slide the safety switch to lock the plates together.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

IMPORTANT: This is a high heat appliance. If your hair has been heavily bleached or is chemically treated or you are concerned with the condition of your hair, please consult your hairdresser before using this appliance.

STYLE TIPS

STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

VOLUME

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straighteners down the hair length.

SHORTER STYLES

// Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

 
Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.

HEAT SETTINGS

There are 6 heat settings available to suit all hair types from 140°C to 235°C. **LOW heat button:-** When pressing the LOW button, you can switch between the lower heat settings of 140°C, 160°C, 180°C or 200°C only. Keep pressing the button until it moves to the temperature you desire. Should you want to use a temperature higher than 200°C, press the HIGH button. The lower heat settings are suitable for enhancing heat protection on fine, delicate or coloured hair. **HIGH heat button:-** When pressing the HIGH button, you can switch between 220°C and 235°C only. Keep pressing the HIGH button until it moves to the heat setting you desire. Should you want to select a temperature lower than 220°C, press the LOW button. The high heat settings are suitable for thick or coarse hair types. On initial use, start on a lower heat setting and increase temperature until you find a suitable temperature for your hair type.

AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. To continue using the appliance after this time, simply press the button  to turn the power on.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.



WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2017 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com
vssassoon.com.au
VSLE2540A