



INSTRUCTION BOOKLET

KERATIN PROTECT

SALON PERFORMANCE ANTI FRIZZ WITH KERATIN

VSLE5126A

ABOUT YOUR DRYER

CONGRATULATIONS!

The VS Sassoon Keratin Protect 2100W dryer has a powerful high torque fan system and Keratin infused ceramic for fast drying results and superior hair protection. Also featuring ionic conditioning technology to control frizz and smooth the hair as you dry for vibrant, luminous shine.



1. 3 heat/2 speed settings
2. Cool shot
3. Slim concentrator nozzle
4. 1.8m power cord
5. Hanging loops
6. Diffuser
7. Hinged filter

2100W HIGH TORQUE FAN SYSTEM	Dry, style and get fast results with a dryer that is fitted with a powerful motor.
IONIC CONDITIONING TECHNOLOGY	Eliminate static & style faster by trapping moisture to reduce your frizz and achieve smooth, shiny results.
KERATIN INFUSED CERAMIC	Keratin infused outlet grill for added hair protection, leaving your hair shinier, healthier & stronger.
6 CONTROL SETTINGS	3 heat & 2 speed settings, plus a cool shot to finish & set your style.
CONCENTRATOR	Used to direct the airflow along the length of your hair, increase drying speed & style with greater precision.
HINGED FILTER	Having easy access to clean out the filter increases the performance & life of your dryer.
HANGING LOOP	Storing this dryer is super easy with a hanging loop.
DIFFUSER	Build life, volume & dry your natural curls. Scrunch dry to create texture & loose waves.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use. (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

1. Towel dry and detangle hair.
2. Plug the appliance into a suitable mains socket.
3. Select the required heat and speed settings.
4. After use, switch off and unplug the appliance.
5. Allow to cool before storing away.

IMPORTANT! Always keep the rear of the appliance away from the hair during use to prevent it being drawn in through the rear air filter.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held too close, cause discomfort or even burns.

IMPORTANT: We do not recommend using this styler if your hair has been heavily bleached or chemically treated. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

STYLE TIPS

STRAIGHT

// Create a smooth straight look by using your dryer with the concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

VOLUME

// Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

CURLS

// Enhance your natural curls by using your dryer with the diffuser on the lowest speed setting & lowest heat setting: it literally diffuses and softens the airflow, which helps to form, not frizz, your curls.

EXPERT TIP

// Set your style by finishing with the cool shot or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair.

©2017 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSLE5126A

HEAT AND SPEED SETTINGS

There are 3 heat and 2 speed settings plus a cool shot button to 'set' hair for longer lasting results. We recommend trying the lowest speed and heat settings to start with and build up to find your comfort level. Even at the lower settings, this dryer will deliver a highly effective blow dry and achieve beautiful results. Only use a higher heat/speed combination to initially dry hair, then step down to a cooler heat and lower speed to finish drying and for styling. This more gentle drying regime will care for delicate hair and will help making drying more comfortable.

SPEED & HEAT COMBINATIONS

Low & Cool – Use the low speed and cool setting for more gentle drying with less penetrating airflow. This is a more comfortable setting on regrowing or thinning hair.

Low & Warm – Increasing to the warm setting will help speed up drying whilst the low airflow will still provide a really gentle blow dry.

Low & Hot – The low speed and hot setting will dry hair more quickly but the gentle airflow prevents this setting from feeling too hot.

High & Cool – Use the high speed and cool setting for cooler drying with a more penetrating airflow to dry hair more swiftly.

High & Warm – The high speed and warm setting is a really efficient drying combination for fast drying without being too hot.

High & Hot – The high speed and hot setting is a highly efficient drying combination for initial fast drying or for thicker hair that feels comfortable with higher heat.

COOL SHOT BUTTON

Use the cool shot button on warm hair to rapidly cool the hair and set the style in place, for a long lasting effect.

SLIM CONCENTRATOR NOZZLE

Use the slim concentrator nozzle to direct the airflow along the hair section to make styling easier.

DIFFUSER

IMPORTANT: Only use the diffuser with your dryer on the lowest heat settings. Use the diffuser to build life, volume and curls in short to medium length hair, or crunch with your hands and follow with diffuser. Shampoo and towel dry your hair. Hang your head forward and aim the diffuser upwards so that the warm air circulates freely through your hair. When dry, toss your head back for a stunning casual look.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from hairdryers can, particularly if held too close, cause discomfort or even burns.

STYLING TIPS

To create body and volume in the hair, use a brush or your fingers to brush the hair in the opposite direction to how it would naturally fall. Direct the airflow towards the roots for maximum lift. Once dry, neaten the hair and brush it back into place. To create a smooth straight look, first divide the hair into sections. Attach the slim concentrator nozzle then use a brush to take up a hair section and hold it taut. Direct the concentrator nozzle along the hair section to dry.

USER MAINTENANCE

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked and cleaned on a regular basis. To help maintain optimum performance and prevent overheating of your hairdryer:

- Ensure that your styler is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of your styler firmly, pull the hinged rear filter down.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the hinged rear filter by pushing back into position.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord and allow the dryer to cool for 15 minutes before restarting. Make sure the air vents are 100% clean.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.

WARNINGS: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.



WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.