

**VS**  
SASSOON

INSTRUCTION  
BOOKLET


Salon Curls  
CONICAL WAND

VSLE253A

## ABOUT YOUR STYLER

### CONGRATULATIONS!

The VS Sassoon Salon Curls is a hairdresser's styler with no clamp, simply wrap the hair around the barrel for fast, easy curls without kinks. This conical wand features a smooth glide titanium surface for effortless, polished results. Use the handy on-trend cosmetic pouch to store additional hair or jewellery accessories to add that finishing touch.

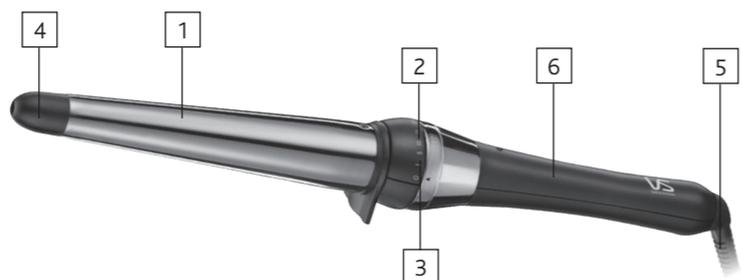

1. Tapered barrel with smooth glide titanium finish
2. 30 Heat Settings
3. I/O selector
4. Cool tip
5. Professional swivel power cord
6. Automatic safety cut off system
7. Cosmetic pouch (not shown)
8. Finger glove (not shown)

UP TO 205°C

For salon professional results.  
The multiple heat settings means  
you can select the appropriate  
temperature for your hair.

TITANIUM  
TECHNOLOGY

A smooth glide titanium barrel  
provides effortless, polished  
results.

CLAMPLESS CONICAL  
TAPERED BARREL

Wraps easily around the barrel to  
create on trend loose curls and  
waves with no kinks.

30 HEAT SETTINGS

For personalised temperature  
control.

AUTO OFF SYSTEM

For peace of mind styling.

## IMPORTANT

A heat-protective glove has been supplied to help protect your hand from temporary contact with the barrel when wrapping the hair around the appliance. Please note that the heat-protective glove is only designed to give initial contact protection. Discomfort will be caused by prolonged contact with the hot surface.

## OPERATING INSTRUCTIONS

1. Remove all packaging and point of sale labels before use.
2. A plastic cover has been placed over the plug to protect it from damage during transportation. Remove before use.
3. Ensure hair is clean and completely dry before using the appliance.
4. Comb through hair to prevent knots and tangles and then divide hair into equal sections.
5. Plug the appliance into a 240V power outlet and select your required temperature setting – please see 'Variable temperature settings' for more information.
6. Place the appliance on a heat protective, flat level surface.
7. Turn the temperature dial to the 'I' position to switch the appliance on. The curling tong will instantly start heating up to the temperature that has been selected. Keep turning until you reach the desired temperature setting.
8. Turn the dial clockwise or anti-clockwise to set the temperature up or down. The red LED will stop blinking when the conical wand to reach the desired temperature. For more information about which heat setting is suitable for your hair type, please see 'Variable temperature settings'.
9. Section the hair evenly and comb through. Before styling make sure the universal heat glove is worn on the hand which is wrapping the hair around the barrel.
10. Take a section of hair starting around 5cms from the scalp.
11. Wind the section around the curler to the ends of the hair.
12. Hold the end of the hair in place at the cool tip for 5-8 seconds depending on hair type, and then unwind hair. For tighter, bouncier curls, roll less hair. For loose, free flowing curls, roll more hair.
13. Style sections of hair until completed.
14. Once the hair has cooled, separate curls using fingers for a softer look or brush out using a comb.
15. To turn the appliance off, turn the dial to the 'O' position.

## STYLE TIPS

### CURLS

// Take a section & wind hair around the barrel. Wind up as far as you want your curl. Try to use the full length of the barrel to spread the section. Hold for five to eight seconds, or until you can feel that your hair is heated through. Leave curl to cool & set before combing or styling further.

### MODERN

// Wind the hair up the barrel to the hair root or as far up the section as you want curls. For a more modern curl, don't wind the hair right the way up to the top of the hair section; instead, leave at least 7cm from the root to the start of the curl.

### TOUSLED

// For a more tousled look, finger comb the curls to break them up once the hair has cooled.

### EXPERT TIPS

// The type of curl achieved depends not just on the size the barrel but also on the section of hair that you wind around the barrel of the curling tong. For looser, free-flowing curls, use bigger sections. Create a more defined, tighter curl by using sections. Pin the curl in the rolled shape and leave to cool for longer lasting results. Finish with a bit of hairspray for extra protection & hold prior to curling.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2018 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)

[vssassoon.com.au](http://vssassoon.com.au)

VSLE253A

## VARIABLE TEMPERATURE SETTINGS

The 30 heat settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

**NB:** The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Settings 1-10 Power/ Low Setting - 125-150°C	Delicate, fine, fragile hair and/or damaged hair
Settings 10-15 Medium Setting - 150-165°C	Thin, easy-to-curl hair
Settings 15-20 Medium high setting - 165-175°C	Normal textured hair
Settings 20-25 High Setting - 175-190°C	Wavy, curly hair
Settings 25-30 Maximum Setting - 190-205°C	Hard-to-curl, very thick hair

## AUTO SHUT OFF

This appliance has a safety automatic shut-off system, which will automatically turn the appliance off if left switched on accidentally for 72 minutes at 50Hz or 60mins at 60Hz. If you wish to continue using the appliance after this time, simply slide the switch to the O position and then turn the switch to the desired temperature setting to turn the power on.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.

**WARNINGS:** Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down
- Always place appliance with stand, if any, on a heat-resistant, stable flat surface.
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.



- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- Do not immerse the appliance into water or other liquids.
- **WARNINGS:** for Storage and Maintenance
- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

### CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.