

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.


**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on.

Do not place on any heat sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use and as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## Wave Envy

VS Sassoon's Wave Envy styler easily creates gorgeous, long lasting waves by simply pressing the hair between the ceramic plate and barrels.

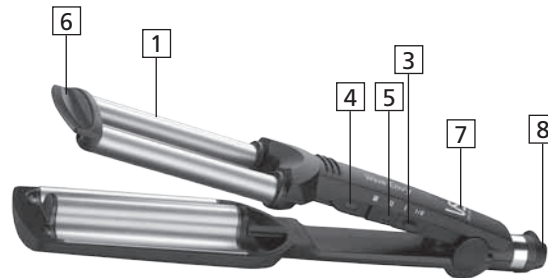

### Features:

1. Ceramic barrels
2. Ceramic plate
3. On/off button
4. LED on indicator light
5. Temperature slide switch with 3 settings: 160°C, 180°C, 200°C
6. Cool tip
7. Automatic safety shut-off system - 72 minutes
8. Professional swivel power cord

### How to use your Wave Envy

1. A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover from the plug before use.
2. Ensure hair is clean and completely dry before using the appliance.
3. Comb through hair to prevent knots and tangles and then divide hair into equal sections.
4. Place the appliance on a flat, level surface.
5. Plug the appliance into a suitable power outlet and select your required temperature setting, please see 'How to use the variable temperature settings'.
6. Press the 'I/O' button. The red LED light will illuminate and blink.
7. When the styler has reached the desired temperature, the red LED light will stop blinking and change to a solid color.
8. Take a section of hair and place it between the top barrels and bottom plate of the styler.
9. Clamp the hair between the top barrels and bottom plate by pressing the appliance together.
10. Hold in place for 5 - 10 seconds. Take care not to let the appliance touch the scalp.
11. Release the appliance from the hair, gently slide down to the next straight part in the hair section and press the plates and barrel together.
12. Continue this action down the entire hair section, towards the ends of the hair.
13. Repeat until all the sections of your hair have been styled.
14. To turn the appliance off press the 'I/O' button. The red LED indicator light will turn off. Allow the appliance to cool before storing away.

### Styling tips:

- For professional results, comb a small amount of mousse or styling gel through the hair before drying and styling.
- For a softer, more natural look, run fingers through the hair to break up the waves.
- For a 'How to' video demonstration, download a QR code App to your smart phone and scan the code below. Or visit [www.vssassoon.com.au](http://www.vssassoon.com.au)



NB: This appliance has a safety automatic shut-off system, which will automatically turn the appliance off if left switched on for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off and unplug the cord.

### How to use the variable temperature settings

The 3 variable temperature settings provide variable heat for different hair types. These settings allow you to choose the required temperature setting according to your particular need.

NB: The heat up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

**WARNING:** This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

**IMPORTANT:** Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

**WARNING:** The 200°C maximum high heat setting is not suitable for hair that has been chemically treated, beached or damaged.  
**DO NOT USE THIS PRODUCT ON HEAT DAMAGED OR CHEMICALLY DAMAGED HAIR ON THE HIGHER HEAT SETTING**

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
160°C	Fine, bleached or delicate hair
180°C	Normal or coloured hair
200°C	Hard to style, thick hair

### What is Ceramic Technology™?

Ceramic Technology helps to tame and reduce frizzes and flyways by preventing heat damage and spreading heat evenly and consistently. Hair damage is minimised as heat is distributed evenly from the styling appliance avoiding harmful hot spots.

#### User Maintenance

Your styler is designed for household use and is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of lint and other debris. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the straightener to cool and wipe exterior with a cloth. If any abnormal condition occurs, allow to cool and return to your place of purchase.

#### Limited Two Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website [www.vssassoon.com.au](http://www.vssassoon.com.au)

To make a warranty claim you must retain your proof of purchase. Further details can be found at [www.vssassoon.com.au](http://www.vssassoon.com.au) and click on 'customer service'.

Get more from your styling tools, visit  
[www.vssassoon.com.au](http://www.vssassoon.com.au)  
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under licence by Conair  
©2014 Conair Australia Pty. Ltd.  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247

**VS**  
SASSOON

**VS**  
SASSOON



instruction booklet  
Wave Envy

VS2337A

LONDON • NEW YORK • SYDNEY  
**JOIN THE EVOLUTION.™**

IB-11/356B