



INSTRUCTION BOOKLET

DEEP RETRO GLAM CERAMIC WAVER


VS2447A



## ABOUT YOUR STYLER

### CONGRATULATIONS!

Have you always wanted to create those glamorous retro deeply defined waves? You'll love how easy it is using this nifty styler. Ideal for waving medium to very long hair.

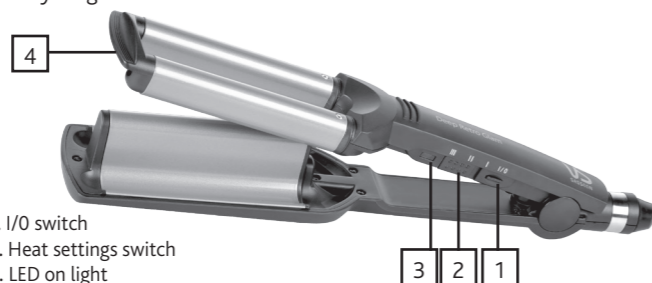

1. I/O switch
2. Heat settings switch
3. LED on light
4. Cool touch tip

160°C/180°C/ 200°C HEAT	Personalise & adjust the temperature settings to suit your hair & style requirements.
LED ON LIGHT	This light blinks to indicate heat-up mode & becomes solid when ready - so you know exactly when to start styling!
CERAMIC TECHNOLOGY	Generates full spectrum, infra red heat which works to help minimise heat damage making your hair less frizzy & more manageable.
DEEP BARREL	Easily create shiny & defined waves by simply pressing your hair between the deep triple barrel. Fast & simple.
COOL TOUCH TIP	Designed to give you comfortable control & generally making it easier to style your hair.
AUTO-OFF SYSTEM	For added safety, this styler turns itself off if left on accidentally.
SWIVEL CORD	This cord was designed specifically to give you the freedom to move & hold the styler at an angle that suits you.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

- Plug your styler into a power outlet.
- Place your styler on a heat protective, flat level surface.
- Press the 'I/O' switch to turn your styler on.
- The red indicator light will turn on and start to flash. At this point your styler will start heating up.
- Use the switch to select you preferred heat setting. For first time users we recommend to start with the lowest setting. See table on reverse for more details on selecting the correct temperatures. Once the LED light stops flashing, the styler has heated to the selected temperature.
- To turn your styler off, press the 'I/O' button. The LED light will turn off. Allow styler to cool before storing.

**WARNING:** This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

**IMPORTANT:** Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

## STYLE INSTRUCTIONS

- Start with hair that is clean, brushed through and completely dry
- Apply a mousse, heat spray or smooth styling product for the best results.
- Comb through to ensure your hair is completely tangle free.
- Divide your hair into 4 sections (2 back and 2 front) .
- At the front make your parting the top of sections.
- Starting at the nape of the back sections, take a horizontal section no wider than the plate of your styler.
- Take a section of hair and place it between the top barrels and bottom plate of the styler.
- Clamp the hair between the top barrels and bottom plate by pressing the appliance together. Take care not to let the appliance touch the scalp.
- Hold in place for up to 5 seconds. Release the appliance from the hair, gently slide down to the next straight part in the hair section and press the plates and barrel together. If you are not getting a defined results, try to hold the styler in place a little longer.
- Continue this action down the entire hair section, towards the ends of the hair and repeat until all the sections of your hair have been styled.

### TIP:

- For professional results, comb a small amount of mousse or styling gel through the hair before drying and styling.
- For a softer, more natural look, run fingers through the hair to break up the waves.

## STYLE TIPS

### WAVES

// For the best results, start with clean, dry & thoroughly combed through hair. Press each section between the plates and release. Work your way down lining up each wave with the one above. Apply a heat spray for extra protection & longer lasting results.

### NATURAL

// For a more natural look, take random sections of hair, waving some sections and leaving others straight. After styling, break hair up with your finger tips for natural, beach waves.

### MODERN

// Start by positioning the styler midway down each hair section, leaving the roots straight. Clamp hair between the top barrels and bottom plate by pressing the appliance together.

### EXPERT TIP

// This styler is also a great tool for creating texture in volume in your hair, ideal for creating extra hold in up-do's or adding fullness to braids & fishtails.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2015 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
**[vssassoon.com.au](http://vssassoon.com.au)**  
VS2447A

## VARIABLE HEAT SETTINGS

The variable temperature settings provide variable heat. Please make sure you choose the required temperature setting according to your particular need and hair type.

TEMPERATURE	SETTINGS	HAIR TYPE
160°C	'I' LOW	Fine, bleached or delicate hair
180°C	'II' MEDIUM	Normal or coloured hair
200°C	'III' HIGH	Hard to style, thick hair

**NB:** The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

## USER MAINTENANCE

Your styler is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the appliance to cool and wipe exterior with a cloth. If any abnormal conditions occur, allow to cool and contact Conair Customer Service.

## CERAMIC TECHNOLOGY

Ceramic Technology will help keep your hair healthy and shiny looking. It generates full spectrum, infrared heat which works on hair molecules to dry them inside & out. It minimises heat damage and makes hair less frizzy and more manageable.

## AUTO-OFF SYSTEM

This appliance has an automatic safety cut off system which will automatically turn your styler off if left on accidentally for 72 minutes. If this occurs, please wait for your styler to cool. Switch off and unplug the power cord. Plug the power cord back in and switch the appliance on to start using your styler again.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.



### WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

### WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

## CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.