



INSTRUCTION BOOKLET




BIG HAIR 1000 HOT AIR STYLER

VS2735GA

ABOUT YOUR STYLER

CONGRATULATIONS!

Combine the benefits of a dryer with not one but two rotating brushes to make adding volume & shine whilst styling & drying your hair oh so easy. Ideal for shorter to very long hair.

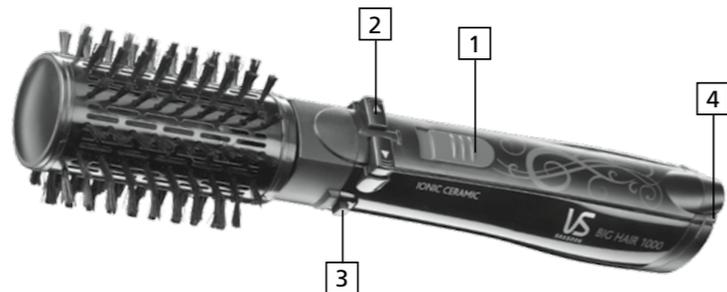

1. Heat/speed settings
2. Rotation switches
3. Release buttons
4. Rear filter

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

1000 WATTS

Dry, style and get fast results with a styler that is fitted with a powerful motor.

HIGH IONIC CONDITIONING

Eliminate static & style faster whilst trapping moisture to reduce your frizzies by up to 75 %*.

CERAMIC TECHNOLOGY

Ceramic technology provides even heat distribution for a silky, smooth finish.

ROTATING SOFT BRISTLES

The soft bristles gently smooth & shape your hair whilst adding unbelievable shine.

3 SWITCH COMBINATIONS

2 heat/speed settings plus cool to set your style.

2 ROTATION BUTTONS

Rotate left or right to add volume or softly rounded ends, or rotate in the opposite direction for a different look.

HINGED REAR FILTER

Having easy access to clean out the filter increases the performance & life of your hot air styler.

BRUSH COVER

A brush cover is included for protection & easy storage.

STYLE INSTRUCTIONS

- Wash and condition your hair as usual. Using a hair dryer, dry your hair first until it is 90% to completely dry. Comb hair to detangle.
- Separate your hair into several sections and pin it to the top of your head with a clip. Take up one section.
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- Remove the protective brush cover by sliding upwards
- Turn on the brush and push the button into the 'I' position. You can increase the speed as you become more familiar with the unit.
- Press the '>' or '<' button depending on your needs ('>' to turn your hair with the ends turned under or '<' for the ends turned out).
- Place the brush under the section starting at the roots while pressing the '>' or '<' button. Slide the brush down to the tips. Once at the tips, return to the roots. To set the style, press the cool shot button. Note that the brush does not spin when used in the cool setting.

GETTING THE TECHNIQUE

PRACTICE ROUND

- // Use the low heat setting (low brush speed) and practice rotating the brush on the lower ends of your hair. Apply downwards tension to resist against the spinning of the brush until you feel comfortable with the styling action. If the brush spins too quickly and hair wraps around the brush head, simply release the rotation button and remove from hair. If hair continues to wrap around the barrel you need to increase the downward tension.

WORK IN STEPS

- // Use clips to separate your combed and untangled hair into sections about 2 cm wide. Lift the upper sections of your hair and pin to the top of your head to begin with the sections of hair at the nape of the neck and the sections underneath. Continue with the sections at the back of head and then the sections on the side. Finish with the sections on the top.

MAXIMUM VOLUME

- // For added root lift, hold the brush close to the roots for a few seconds. Move the brush through the section, start to rotate the brush away from your head by pressing and holding the appropriate rotating button. Move the brush away from your head in an upward motion. Finish styling using the cool setting to set your style.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2016 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:

Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:

For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VS2735GA

IB-12/290C

THE ATTACHMENTS

Make sure you select your rotating air brush to best match the length of your hair. For long hair, we recommend the large brush and for medium-length hair we recommend the smaller brush.

Attaching and removing the attachments

To attach the brush head to the body of the unit, line up the guides of the two parts and press until you hear a click. To remove the brush, press on the unlocking buttons located on the sides of the unit and gently pull the attachment off.

Two directions to turn the rotating head

To roll the section of hair around the rotating head automatically, press the button for the desired direction (right or left) and hold throughout the blow-drying. The right or left rotation corresponds to the handling as well as to the desired effect of blow-drying under or out. To stop rotating, release the button.

WARNING! The ceramic brush barrel will get hot during use. Take care to avoid the hot surface of the styler coming in direct contact with the skin, in particular the eyes, ears, face and neck.

HOW TO VIDEO

Visit our website to see a detailed How-To video for the Big Hair Styler via the URL: www.vssassoon.com.au/BigHair/StylerVideo

Or follow this QR code:



USER MAINTENANCE

IMPORTANT! Check and clean the styler filter on a regular basis.– To help maintain optimum performance and prevent overheating of your appliance, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, click open the rear filter at the base of the styler down to open.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by pushing back into position.
- We recommend cleaning the brush head regularly to prevent accumulation of hair, styling products, etc. Use a comb to remove hair from the rotating head and the small brush. Use a dry or very slightly dampened cloth for the plastic and ceramic surfaces.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.

WARNINGS: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
 - If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
 - Do not operate this appliance or disconnect from the power supply with wet hands.
 - Never use this appliance at the same time as styling products such as aerosols (spray).
 - Be very careful when handling this appliance as parts of it may get extremely hot.
 - Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
 - Keep the cord away from heated surfaces.
 - Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
 - Do not cover this appliance with anything when it is switched on or hot.
 - To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- WARNINGS:** for Storage and Maintenance
- Always unplug the appliance immediately after use and before cleaning or maintenance.
 - Do not leave the appliance unattended when plugged in or switched on.



- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom.
Ask your installer for advice.