

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.




IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use and as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

VS PRO Styler Ionic

VS Sassoon's VS PRO Styler Ionic is completely versatile, it can be used to create straight styles, flips, curls and volume styling. Ceramic coated plate and Ionic Condition Technology™ provide a silky, smooth finish and the variable temperature settings, up to 200°C, let you select the ideal setting for your hair type.

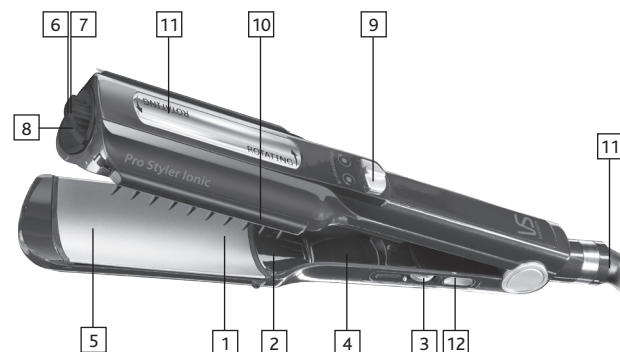

Features:

1. Ceramic technology with a maximum of 200°C
2. Ionic conditioning technology™
3. Temperature selector
4. 30 second instant heat.
5. New satiny, ultra-soft coating.
6. Motorised rotating barrel
7. Cool touch ends
8. Removable rotating barrel for easy cleaning
9. Spin control: Left-Off-Right
10. Removable combs
11. Swivel cord
12. On/off switch with automatic shut-off

Use

Before using your VS PRO styler...

- Wash your hair, dry using a hair dryer and untangle with a large tooth comb.
- Plug your VS PRO styler into the mains and press the 'I/O' button. The red indicator light will come on: after a very brief heat-up time, your styler is ready to use; the red LED will remain lit throughout use.

Note! Every time you use your styler, you may notice some steam being released. This may be from the evaporation of the sebum or the remains of hair products (leave-in hair care, hair spray, etc.) or dampness in your hair. You will also notice that the unit sputters slightly, this sound is normal for a high output ion generator.

- Set the temperature using the temperature selector. Generally, we recommend starting with a lower temperature for fine, bleached and/or damaged hair, and a higher temperature for curly, thick and/or difficult-to-style hair. Because every hair type is different, we recommend you set the appliance at position 1 when you use it for the first time. You can increase the temperature progressively as necessary over the next few uses. Please use the table for reference:

To straighten your hair

- Take up a section of hair about 3-4 cm wide and place it between the plates near the roots of your hair.
- Close the plates and hold, sliding the appliance slowly from the roots to the tips. Repeat if necessary.
- For perfect straightening that falls vertically, separate the sections of finer hair and straighten them slowly.
- For 'volume straightening', separate the thicker sections of your hair and straighten them more quickly.
- Style your hair for the final touch. Set the straightening with a little hairspray, but do not brush your hair.

To shape the ends

The pro styler can also be used to emphasise the ends of your hair...

- To style your hair by turning the ends under, use as described above and turn the unit under, with the rotating barrel under the hair.
- To flip the ends of your hair outward, use the same move but in the opposite direction, with the rotating barrel on top of your hair.
- After use, press the 'I/O' button and unplug the unit.

To create volume at the roots

- Take up a 3-4 cm wide section of hair, holding the plates perpendicular to your head, place your hair between the plates with the rotating barrel under your hair.
- Close the unit and make a one-quarter turn with the hair, hold for 1 to 2 seconds, then slowly slide the unit from the roots to the ends.
- Use the unit only at the roots and if you want to style the same section of hair again to intensify the effect, wait until it has cooled.
- When finished styling the roots, comb your hair with a widetoothed comb to even the waves and generate volume.

To curl your hair

- Take up a 3 to 4 cm section of hair and close the unit with the rotating barrel underneath.
- Holding the unit closed, turn it upwards 180°, so that the window on the rotating barrel can be seen on top of the section.
- Then gently pull to the ends, release the section and you will have a superb curl.

DO NOT USE THIS PRODUCT ON HEAT DAMAGED OR CHEMICALLY TREATED HAIR ON THE HIGHER HEAT SETTINGS

Please see Temperature Setting Guide for further information.

Positions	Hair type
1-10	Fine, bleached and/or damaged hair
10-15	Fine to normal, coloured hair
15-20	Normal, wavy hair
20-25	Thick and/or wavy hair
25-30	Very thick, curly and/or difficult-to-style hair

Maintenance

- Allow the unit to cool completely.
- The rotating barrel may be removed from the unit. Rotate the lock one-quarter turn anti-clockwise and pull out.
- Clean the plate and the barrel using a soft, damp cloth, without detergent, to preserve their optimal quality. Do not scratch the plate or barrel.
- Put the barrel back into the unit by holding it upright and sliding the pins into their housing. Rotate the lock one-quarter turn clockwise until you hear a click.

Limited Two-Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms on the warranty cards displayed on the VS Sassoon website www.vssassoon.com.au

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.

VS
SASSOON

VS
SASSOON



Get more from your styling tools, visit
www.vssassoon.com.au
for news, styling tips and much more.

instruction booklet
PRO Styler Ionic

VS290A

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair
©2012 Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com
Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

LONDON • NEW YORK • SYDNEY
JOIN THE EVOLUTION.™