

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER:

When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

Pro-Traveller Dryer

VS Sassoon's Pro-Traveller Dryer has various features that make it the ideal travel dryer. With 1900 watts fast drying power, convenient folding handle, multi voltage for worldwide use, 2 heat/speed settings, concentrator and a stylish chrome finish the Pro-Traveller Dryer is the ultimate travel dryer.



Features:

1. 1900 watts
2. 2 heat/speed settings
3. Multi voltage
4. Concentrator
5. Folding handle

How to use your Pro-Traveller Dryer

- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Check the correct country voltage is selected on the dryer handle before use.
- Plug the appliance into a power outlet.
- Towel-dry and detangle the hair.
- Select the required heat/speed setting. There are 2 heat/speed settings to choose from. Use the high heat/speed setting for initial drying. Use the low heat/speed setting as hair begins to dry, and for styling and scrunch drying.
- After use, switch off and unplug the appliance. Allow to cool before storing away.



Concentrator -

Use the concentrator for directing air flow just where you want it, for styling and straightening ease. For additional control, use one of the lower speed settings and point the airflow along the surface of the hair to be dried.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from hairdryers can, particularly if held too close, cause discomfort or even burns.

Multi Voltage

This dryer has an adjustable voltage feature for worldwide use. The voltage can be adjusted for use at 110-120V or 220-240V by selecting the required voltage using the screw on the handle. To set the voltage at 220-240 move the screw anticlockwise till the central groove of the screw is pointing towards the '240' marking. To set the voltage at 110-120 move the screw clockwise until the central groove of the screw is pointing towards the '120' marking. A suitable plug adaptor will be required, please refer to the chart below.

Always ensure the voltage to be used corresponds with the voltage selected. Never use the appliance on 240V if the appliance is set to 120V or vice versa. The multi voltage feature on this dryer allows the dryer to be used world wide when traveling.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East, Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

Cleaning and Maintenance

To help maintain optimum performance and prevent overheating, the rear filter should be cleaned on a regular basis.

- Using a soft brush, clean any hair and other debris from the filter.
- The surface may be cleaned with a soft, slightly damp cloth.

Limited Two-Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website www.vssassoon.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vssassoon.com.au and click on 'customer service'.

Get more from your styling tools, visit
www.vssassoon.com.au
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair
©2012 Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com
Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VS
SASSOON

VS
SASSOON



instruction booklet
Pro-Traveller Dryer

VS5345GA

LONDON • NEW YORK • SYDNEY
JOIN THE EVOLUTION.™