



INSTRUCTION BOOKLET

PRO STYLING 1000 MULTI STYLING BRUSH

VSHA115A



ABOUT YOUR STYLER

CONGRATULATIONS!

Combine the benefits of a dryer with your choice of brush to make adding volume & shine whilst styling & drying your hair oh so easy. Ideal even for shorter & very fine hair.



- 1. Operating switch
- 2. Cool shot
- 3. Unlocking buttons
- 4. Hinged rear filter
- 5. Paddle brush head
- 6. Volumising brush
- 7. Bristle brush

1000 WATTS	Dry, style and get fast results with a styer that is fitted with a powerful motor.
PADDLE BRUSH	Ideal for drying and detangling whilst smoothing down your frizzies.
VOLUMISING BRUSH	Perfectly shaped to get right at the root this volumising attachment is ideal for creating volume in your hair.
BRISTLE BRUSH	The soft bristles gently smooth & shape your hair whilst adding unbelievable shine.
HIGH IONIC CONDITIONING	Eliminate static & style faster whilst trapping moisture to reduce your frizzies by up to 75%*.
4 SWITCH COMBINATIONS	3 heat/speed settings plus cool to set your style.
HINGED REAR FILTER	Having easy access to clean out the filter increases the performance & life of your hot air styler.

TO STYLE

Wash and condition your hair as usual.

- Use your hot-air brush on pre-dried, slightly damp hair that is completely tangle free.
- Ensure the operating switch is set to the 'O' setting before plugging into a 240v suitable power outlet.
- The brush has 4 settings: 0 (off), I (low), II (medium) and III (high). The low setting is ideal for fine hair, the high setting for thicker hair. The 'cool air' setting allows you to fix the styling for really long-lasting effects.

FITING AND REMOVING THE ATTACHMENTS

Fit the attachments onto the body of the unit by lining up the guides on the two parts and then press the two together until you hear a click. To remove an attachment, press on the unlocking buttons located on the sides of the unit and gently pull the attachment off.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air can, particularly if held too close, cause discomfort or even burns.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

THE ATTACHMENTS

CUSHION BRUSH

- // Using the cushion brush, slowly brush the hair in order to untangle and style it. Start by detangling the tips, then start higher, to obtain smooth, sleek hair.

VOLUMISING ATTACHMENT

- // Slide the brush fitted with the volumising attachment into the hair, starting a few centimeters from the parting, then slowly move towards the parting to create lift at the roots and give your hair more body. Keep the brush in place for a few seconds then slowly slide out of the hair.

BRISTLE BRUSH

- // Its size is specially suited for the finishing touches: this brush will accentuate the shaping of certain sections like the fringe, the tips or the roots.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2015 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSHA115A

IONIC CONDITIONING TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with manmade fibers and air pollution add to the build-up of static electricity in your hair.

Even simply brushing and towel-drying your hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface.

Consequently, your hair may have a dull appearance. High levels of static charge cause your hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, leaving your hair silky and shiny with reduced frizz.

USER MAINTENANCE

Unplug the unit and allow to cool completely before cleaning or storing.

We advise you clean the brush regularly to avoid build-up of hair, styling products, etc. Use a comb to remove hair from the brush. Use a dry or very slightly damp cloth for the plastic surfaces.

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked and cleaned on a regular basis. To help maintain optimum performance and prevent overheating of your hairdryer:


- Ensure that your styler is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of your styler firmly, twist and pull the rear filter down to remove.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by twisting and pushing back into position.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord and allow the dryer to cool for 15 minutes before restarting. Make sure the air vents are 100% clean.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry. 
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.

WARNINGS: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.