

#### Cleaning and Maintenance

To help maintain optimum performance and prevent overheating of the hairdryer, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, pull the hinged rear filter down.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the hinged rear filter and click into place.

#### Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

To make a warranty claim you must retain your proof of purchase. Further details can be found at [www.vssassoon.com.au](http://www.vssassoon.com.au) and click on 'customer service'.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair ©2014  
Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia  
Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247

VSLE012A

# EVOKE

STYLING PACK

VSLE012A



## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

### DANGER:

When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## EVOKE

### Styling Pack

The Evoke Styling Pack features a lightweight hairdryer with a powerful 2000 watts for fast drying. It features 3 heat/speed settings for variable style control. With a concentrator nozzle for controlled airflow, a volumising diffuser and cool shot to set your style in place.



### Features:


1. 2000 watts
2. 3 heat/speed settings
3. Cool shot button
4. Concentrator
5. Volumising diffuser
6. Hinged rear filter
7. Hanging loop
8. Ergonomic handle

## How to use your Evoke Styling Pack

The Evoke Styling pack features a lightweight, full powered hair dryer plus concentrator and volumising attachments for convenient and controlled styling.

1. Wash and condition your hair as usual.
2. Always towel-dry your hair before using the dryer.
3. Ensure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
4. There are 3 heat/speed settings, plus the cool shot button.
  - a. Use the low heat/speed setting as the hair begins to dry and for styling and scrunch drying. The low heat is also best for fine or damaged hair.
  - b. Use the medium heat/speed setting for normal hair.
  - c. Use the high heat/speed setting for initial drying. The highest setting is ideal for thick or hard to style hair.
5. Use the cool shot button on warm hair to rapidly cool the hair and set the style in place for a longer-lasting effect.

### The Attachments:

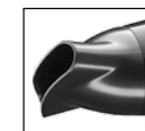

#### Concentrator -

Use the concentrator for directing airflow just where you want it, to ease styling and straightening. For additional control use one of the lower settings and point the airflow along the surface of the hair to be dried.

**CAUTION:** Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from the hairdryers can, particularly if held to close, cause discomfort or even burns.



#### Volumising Diffuser -

**Important:** Only use the diffuser with your dryer on the lowest heat settings. Use the diffuser to build life, volume and curls in short to medium length hair, or scrunch with your hands and follow with diffuser. Shampoo and towel dry your hair. Hang your head forward and aim the diffuser upwards so that the warm air circulates freely through your hair. When dry, toss your head back for a stunning casual look.

Get more from your styling tools, visit  
**[www.vssassoon.com.au](http://www.vssassoon.com.au)**  
for news, styling tips and much more.