

**VS**  
SASSOON

INSTRUCTION  
BOOKLET



POCKET ROCKET  
**MINI PRO**  
DRYER

VSLE245A

## THANK-YOU - YOUR SUPPORT IS APPRECIATED

Thank-you for purchasing a Power of Pink product and helping VS Sassoon support Breast Cancer Network Australia.

**Breast Cancer Network Australia** (BCNA) works to ensure that Australians affected by breast cancer receive the very best support, information, treatment and care appropriate to their individual needs.

BCNA is the peak national organisation for Australians affected by breast cancer, and consists of a network of more than 100,000 members and 300 Member Groups. More than 90 per cent of our members have had a diagnosis of breast cancer, and the remaining members have had a personal experience with breast cancer through a family member or friend.

**By purchasing this product you are contributing to BCNA projects with the following mission:**

### SUPPORT

BCNA support the needs of Australians affected by breast cancer through our services, resources and programs.

### INFORM

BCNA develops and provide high quality information in a range of formats including information that can empower participation in decisions about treatment and care.

### REPRESENT

BCNA advocates on behalf of Australians affected or at risk of breast cancer to ensure their voices are heard.

### CONNECT

BCNA connects people through their shared breast cancer experience to build support for individuals, groups and communities.

For more information please see [www.bcna.org.au](http://www.bcna.org.au)

## ABOUT YOUR DRYER

### CONGRATULATIONS!

Never go anywhere without your style buddy. Take it on your travels, store this life saver in your office draw or gym bag. You will instantly fall in love with this oh-so cute little pocket rocket. Ideal for guaranteed style on-the-go.



1. 1200 watts
2. 2 heat/speed settings
3. Multi voltage
4. Concentrator

1200 WATTS	Great drying power for fast results.
LIGHT WEIGHT & ERGONOMIC	Perfectly balanced & with anti-slip pads so you can style, smooth & dry your hair with comfort & control.
CONTROL SETTINGS	2 Variable heat/speed settings putting you in control of your style.
CONCENTRATOR	Used to direct the airflow along the length of your hair & help you to style with greater precision.
WORLD VOLTAGE	Discover the world in style with this a-ma-zing adjustable voltage feature.
MINI SIZE	Powerful things in small packages. Your space saving style buddy ideal for suitcases, gym bags & office drawers.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

- Wash, condition and towel dry your hair
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- Use the high heat/speed setting for initial drying or drying thick, hard to dry hair.
- Switch to the low heat/speed setting as the hair begins to dry and for styling and scrunch drying.
- If your hair is very fine and damaged, it may be best to use the low heat/speed setting.

## MULTI VOLTAGE

This dryer has an adjustable voltage feature for worldwide use. The voltage can be adjusted for use at 110-120V or 220-240V by selecting the required voltage using the screw on the handle. To set the voltage at 220-240 move the screw anticlockwise till the central groove of the screw is pointing towards the '240' marking. To set the voltage at 110-120 move the screw clockwise until the central groove of the screw is pointing towards the '120' marking. A suitable plug adaptor will be required.

Always ensure the voltage to be used corresponds with the voltage selected. Never use the appliance on 240V if the appliance is set to 120V or vice versa. The multi voltage feature on this dryer allows the dryer to be used world wide when travelling. Product performance will be affected when using a lower voltage power supply.

**CAUTION:** Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held too close, cause discomfort or even burns.

**IMPORTANT:** Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

## STYLE TIPS

### STRAIGHT

// Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

### VOLUME

// Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

### REFRESH

// Refresh your style by giving the roots a quick blast of hot air.

### EXPERT TIP

// Finish with a spritz of light hold hair spray, for extra hold if needed.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Two-Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**

## THE ATTACHMENT

### Concentrator

Concentrator nozzles are designed to direct the airflow from your hair dryer to just where you want it, to ease styling and straightening. Nozzles also help you to direct the airflow along the length of the hair from roots to ends. This is important because it helps to smooth the outer surface or cuticle of the hair giving your hair style a smoother finish.

For additional control try using one of the lower speed setting with a higher heat.

Care should be taken not to direct the air flow directly onto the skin (e.g. the scalp, neck, ears and face). Never rest the concentrator nozzle on the hair and brush to hold it in place! You should always leave a 2 cm to 3 cm gap between the end of the nozzle and the hair around the brush.

## USER MAINTENANCE

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked and cleaned on a regular basis. To help maintain optimum performance and prevent overheating of your hairdryer:

- Ensure that your styler is switched off, unplugged from the power outlet and has cooled down.
- Using a soft brush, clean any hair and other debris that may build up in the filter.


If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord and allow the dryer to cool for 15 minutes before restarting.

Make sure the air vents are 100% clean.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry. 
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.

### WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

### WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

### CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom.

**CONAIR**

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2015 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
**[vssassoon.com.au](http://vssassoon.com.au)**  
VSLE245A