

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

### DANGER:

When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## Active Dryer

VS Sassoon's Active Dryer is the ideal 'on the go' dryer with fast drying power, convenient folding handle, 2 heat/speed settings and a concentrator nozzle.



### Features:

1. 1600 watts
2. 2 heat/speed settings
3. Concentrator nozzle
4. Folding handle
5. BONUS Scunci Active headbands and shower comb


## How to use your Active Dryer

- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Check the correct country voltage is selected on the dryer handle before use.
- Plug the appliance into a power outlet.
- Towel-dry and detangle the hair.
- Select the required heat/speed setting. There are 2 heat/speed settings to choose from. Use the high heat/speed setting for initial drying. Use the low heat/speed setting as hair begins to dry, and for styling and scrunch drying.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

### Warning

Never store any hairdryer with the cord wrapped tightly around the dryer as this can create stress on the cord exiting the dryer handle and can create damage over time resulting in the cord to fuse.

### Concentrator -

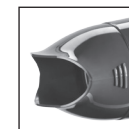

Use the concentrator for directing air flow just where you want it, for styling and straightening ease. For additional control, use one of the lower speed settings and point the airflow along the surface of the hair to be dried.

**CAUTION:** Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from hairdryers can, particularly if held too close, cause discomfort or even burns.

#### Cleaning and Maintenance

To help maintain optimum performance and prevent overheating, the rear filter should be cleaned on a regular basis.

- Using a soft brush, clean any hair and other debris from the filter.
- The surface may be cleaned with a soft, slightly damp cloth.

#### Limited Two-Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website [www.vssassoon.com.au](http://www.vssassoon.com.au)

To make a warranty claim you must retain your proof of purchase. Further details can be found at [www.vssassoon.com.au](http://www.vssassoon.com.au) and click on 'customer service'.

Get more from your styling tools, visit  
[www.vssassoon.com.au](http://www.vssassoon.com.au)  
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under license by Conair  
©2014  
Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia  
Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247

VS  
SASSOON

VS  
SASSOON



instruction booklet  
Active Styling Dryer

VSLE821A