

VS
SASSOON

FOR MEN



THE STYLE CUT

TOOL TIPS

for the multi-purpose clipper & personal grooming kit
for easy at-home cutting & trimming.

VSM437CA

HEY YOU!
TAKE A BOW FINE SIR.

THINGS ARE LOOKING UP
& **YOU'VE JUST MADE A
QUALITY PURCHASE**
WITH THIS NEW GROOMING TOOL.

WE KNOW YOU'VE GOT THIS, BUT BEFORE YOU JUMP INTO
USING YOUR NEW SIDE KICK, HERE'S A FEW TIPS & TRICKS
TO KNOW BEFORE LETTING YOUR CREATIVITY RUN LOOSE.

HIT UP VSFORMEN.COM.AU FOR MORE GROOMING & INSPIRATION.



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off



WARNING: Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces
- Never twist or pull on the power cord.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom.
Ask your installer for advice.

THE STYLE CUT

BRAVO. YOU'VE MADE A QUALITY PURCHASE.

The Style Cut is the multi-purpose clipper & personal grooming kit for easy at-home cutting & trimming.



1. Diamond sharpened blades
2. Mains powered
3. 45mm clipping blade
4. 8x cutting comb guides - Grades #1 - #8 comb guides (3mm to 25mm) for cutting, shaping & fading
5. 2x left + right ear taper cutting comb guides for the finishing touches around the ears
6. Barber comb
7. Scissors
8. 3 hair sectioning clips
9. Blade guard
10. Cleaning brush
11. Oil
12. Drawstring storage pouch

PREPPING YOUR NEW TOOL

MAINS OPERATION

- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into suitable power outlet. Ensure your new clipper is switched off before plugging into a power outlet.
- Plug your new clipper into a suitable power outlet and switch the product on by sliding the on/off switch to the 'on' position.

ADJUSTING THE POWER SCREW

The power screw allows you to adjust the power of your clipper.

To adjust the power screw - take a screwdriver or coin - turn the power Screw counter clockwise until the arm strikes the coil, making a clacking noise (Fig.1).

Then, turn the screw clockwise, until the noise stops and then turn about 45 degrees more. This is the maximum power setting (Fig.2).

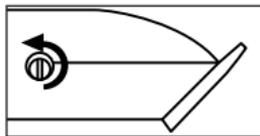


Fig.1

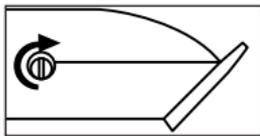


Fig.2

OILING THE BLADES

To get the sharpest, most precise cut, it is highly recommended to oil the blades before each use.

Using the oil supplied with your new clipper, unscrew the cap & cut off the very end of the plastic tube with a pair of scissors to release the oil.

Plug your clipper into a suitable power outlet and switch on. Gently squeeze the oil tube & apply 2 drops of oil onto the blades. Leave the clipper on for a further few seconds to allow the oil to thoroughly spread across each of the blades. Switch off the clipper & remove any excess oil by gently dabbing with a cloth.


HOW TO USE THE STYLE CUT

BEFORE USING


- Always inspect the clipper blades for noticeable signs of damage.
- Ensure the clipper blades are well oiled before using.
- Always inspect the clipper blades before use to ensure they are free from hair, debris etc.
- For best performance use on clean, dry hair that has been combed until tangle-free.
- Always check that the tips of the two blades are parallel and aligned correctly. Correctly aligned blades will provide best cutting performance. Failure to do this can result in injury.

ALIGNING THE BLADES

1. First you'll need to remove the blades from your clipper. To remove the blades simply unscrew the two screws located on the back of the blade (see Fig.3). The two blades should then simply be removed from the clipper head. Keep the screws aside for reapplying the blades to the clipper head.

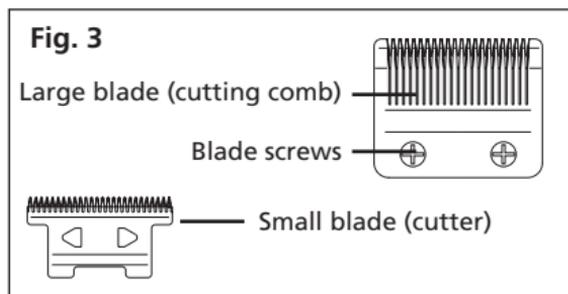

2. To realign the blades, simply match them up, point to point. The top edge of the large blade should be 0.5mm to 1.2mm higher than the top edge of the small blade (see Fig.4). This is important so that the clipper does not cut too close, or come into contact with the skin.

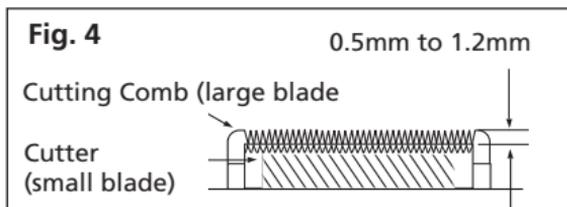

3. The extreme left-hand tooth of the large blade must cover or be to the extreme left hand of the first small tooth on the small blade. Be sure that the extreme right-hand tooth of the large blade touches the extreme right-hand tooth of the small blade.
4. To re-attach the blades to the clipper head, simply slide the small blade on to the white oscillating head, making sure that the small blade and large blade are still properly aligned. Line up the large blade with the two screw holes. Place the original screws, one in each hole and lightly tighten with a Philips head screwdriver until secure.
5. The clipper is now suitable for use.

EASY CLIPPING, YOUR WAY

The Style Cut features 8 cutting comb guides for cutting, shaping and fading. It also comes with left and right ear taper cutting comb guides for the finishing touches around the ears.

The comb guides are marked with the following grade number:

Cutting Length	Grade
3mm	#1
6mm	#2
9.5mm	#3
13mm	#4
16mm	#5
19mm	#6
22mm	#7
25mm	#8
Ear taper	Left
Ear taper	Right

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position.
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off.
- To attach the ear comb guides, choose either the left or right guide depending on which ear you are cutting above. Angle the clipper and gently stroke around the ear towards the back of the neck.

CLIPPING TIPS

Hit up www.vsformen.com.au for more grooming tips, inspiration & guidance on how to get the best use of your clipper.

CREATING AN ALL-OVER EVEN CUT

1. Ensure the clipper is switched off.
2. Attach the desired cutting comb guide as required.
3. Switch the clipper on – the blades will start to move.
4. Start cutting at the nape of the neck, holding the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
5. Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair to the length as shown on the comb guide.
6. Once the desired length is achieved at the back of the hair, start clipping the top and sides.
7. Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.

CREATING A SHORT BACK & SIDES LOOK, WITH LENGTH ON THE TOP

1. Ensure the clipper is switched off.
2. Attach the desired cutting comb guide as required.
3. Switch the clipper on – the blades will start to move.
4. Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
5. If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
6. Start cutting at the nape of the neck, and with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
7. Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

OUTLINING

1. To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
2. Hold the clipper upside down, so the front of the clipper is facing towards your head.
3. Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

CLIPPER CLEANING & MAINTENANCE

Because the clipper blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your clipper, it is important to clean the blades + the comb guides after every use.

After each use, clean the clipper blade set as follows:

1. Switch the clipper off and unplug from the power outlet.
2. Using the cleaning brush, gently brush and blow any hairs from the blade set and head of your clipper.
3. Remove the blades carefully noting which way round they are fitted (see ALIGNING THE BLADES for more detail).

Never place the blades under running water, as this can ruin the cutting performance of the blades. Always use the cleaning brush to clean the clipper head.

NOTE: Do not attempt to repair or replace the blades. In the event that the blades become blunt or damaged, contact the Conair CustomerCare Line (Conair Customer Service).

LIMITED TWO YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

**TO MAKE A WARRANTY CLAIM YOU MUST
RETAIN YOUR PROOF OF PURCHASE.**



Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair.

©2017 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US

For advice & tips on your new VS product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Visit VSFORMEN.COM.AU for grooming tips & inspiration.

VS
SASSOON

FOR MEN

**YOU WERE
BORN TO
BE REAL,
NOT TO BE
PERFECT**

IB-17/314